

Height extension

In stacked panel condition with a height extension $\leq 1'$ it is not required to install ties in the tie holes of the extended panels, as long as the scaffolding bracket is attached to the panel below (Fig 12.1).

For height extensions with panels $\leq 1'$ and the scaffolding bracket attached to this panel it is only required to install a tie in the top tie holes (Fig. 12.2).

For height extensions $> 1'$ a tie should be installed in every tie location (Fig. 12.3).

These dimensions refer to concrete height above lower panels. That means, for instance, if you have to pour 10" above the lower panel and you only have a 2' panel available, you do not need a tie.

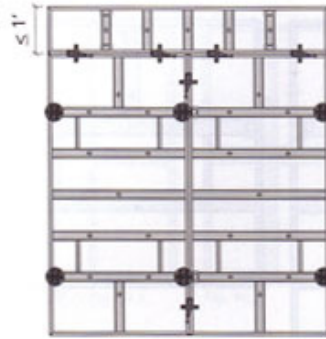


Fig. 12.1

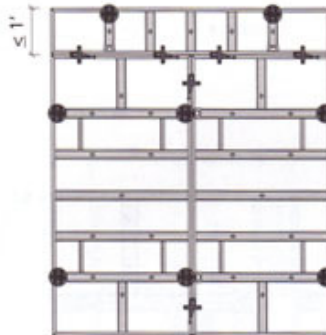
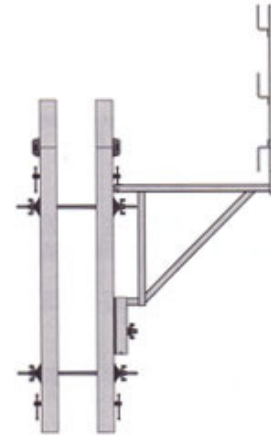


Fig. 12.2


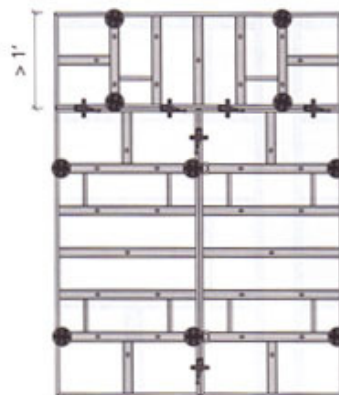


Fig. 12.3

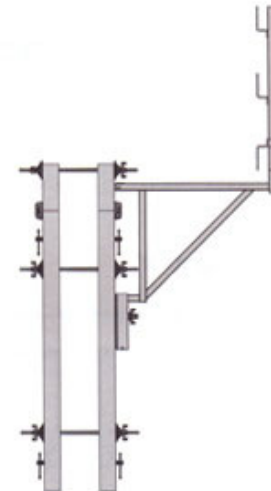