

Outside corners

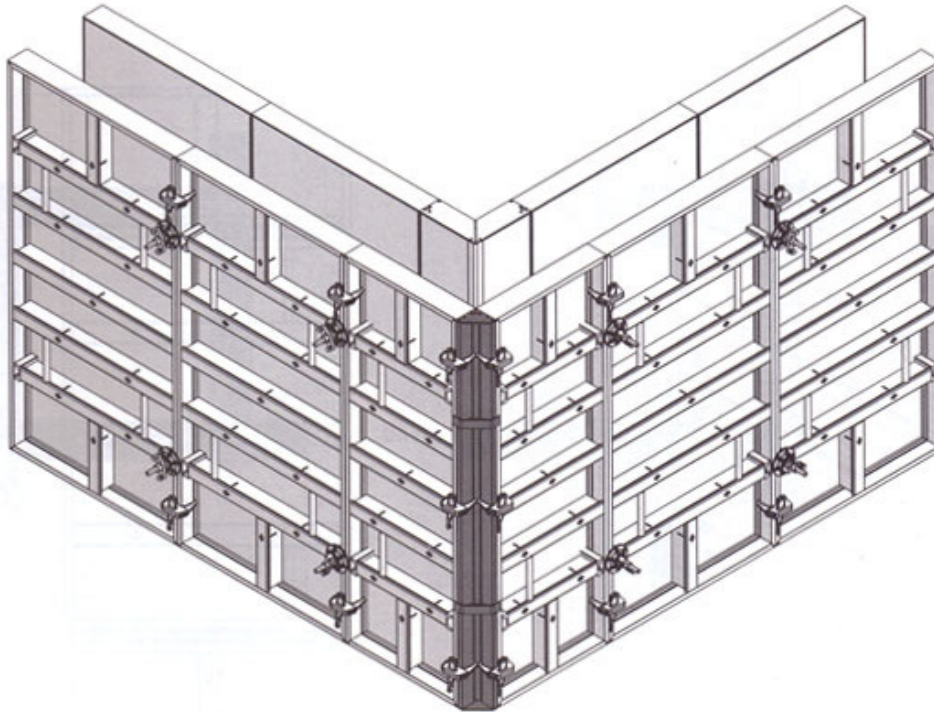


Fig. 15.1

The MevaLite outside corner and panels are connected with assembly locks.

With extended formwork the amount and position of assembly locks must be directed by the technical department.

For 9' high outside corners 4 assembly locks on each side are required. For 6' high outside corners 3 assembly locks on each side are needed (Fig. 15.1), and for 4' and 3' high outside corners 2 assembly locks on each side are sufficient.

Panel width = WT + 1'
(WT = Wall thickness)

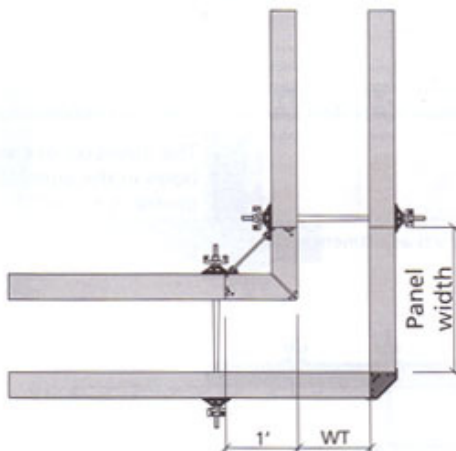


Fig. 15.2

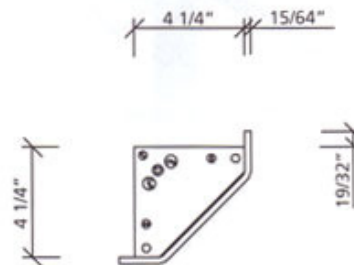


Fig. 15.3

Description	Ref.-No.
ML-outside corners	
9'.....	22-505-10
6'.....	22-505-20
4'.....	22-505-30
3'.....	22-505-40
EA-assembly lock	29-205-50