


Wall offset

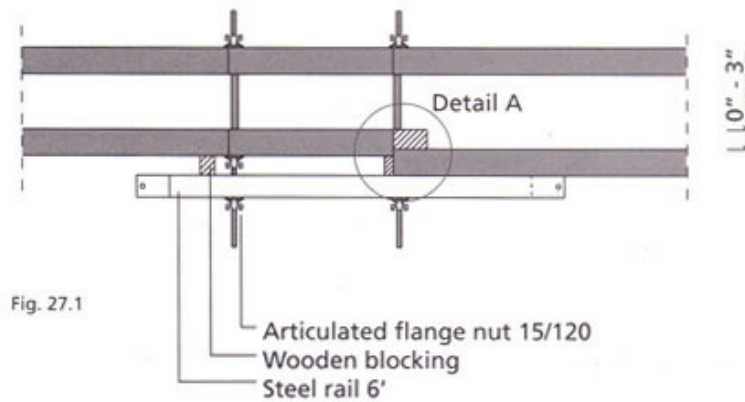

One-sided wall off-sets of up to 3" are formed by moving back the corresponding panel (Fig. 27.1). For offsets exceeding 3", inside corners should be used (Fig. 27.3 and 27.4).

The offset sections of the wall formwork are reinforced by steel rails.

Panels arranged offset from each other are connected by means of Uni-assembly locks 22 (Fig. 27.2).

