

## Differences in height

The assembly lock can be attached at any position on the frame profile (Fig. 29.1), so the formwork needs no connection grid and requires no additional accessories for assembly. Vertical, horizontal and even inclined panels can all be safely connected by means of assembly locks, even with differences in height. Job built fillers are made with 1x4's and an alkus plastic sheet or plywood cut to size. When required, use a square timber for reinforcing. The 1x4's and panels are simply connected to each other with assembly locks.

The wood filler areas need special attention (see page 23). The use of rails and/ or blockings may be required (Fig. 29.2).

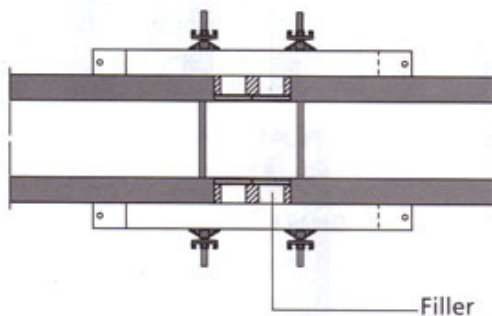
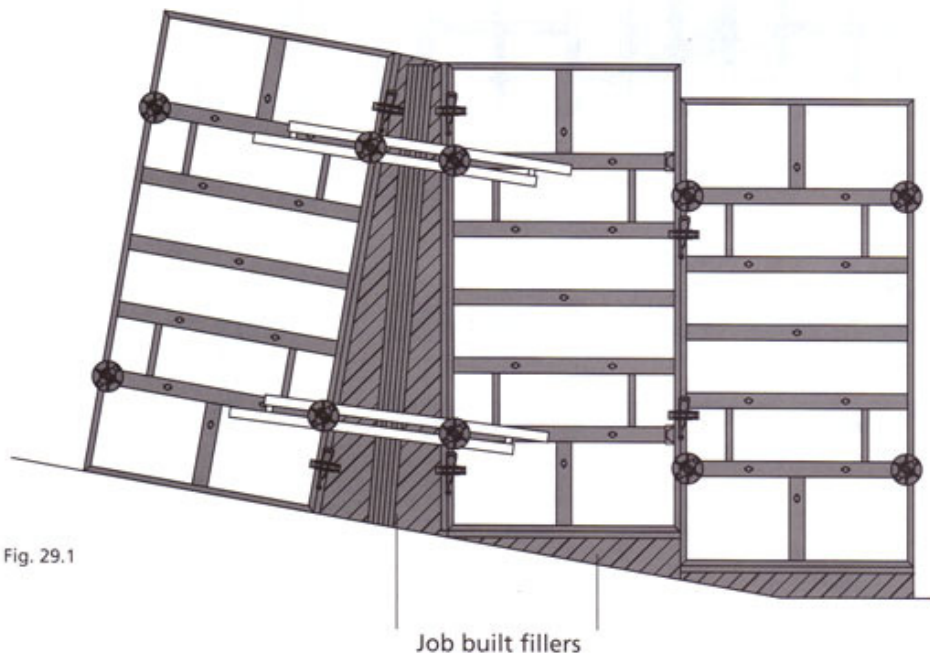


Fig. 29.2